

## Forward calls (M3902)

---


The Call Forward feature allows you to direct your

## Forward calls (M3903 and M3904)

---

The Call Forward feature allows you to direct your calls to ring at another line (DN). If the telephone begins to ring, you cannot forward an incoming call in progress.

To forward your calls:

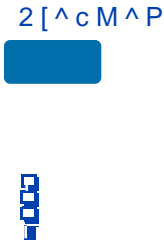

1. Press the **Forward** Key.  
The previously stored forward number appears, if one exists, and the screen displays 1 Z ` Q ^ R [ ^ c M ^ P Z a Y N Q.
2. If desired, enter a new number. The existing number is automatically deleted. If you make a mistake, use the **Delete** Key to delete the previous digit(s). Press **Cancel** to leave this screen without forwarding your telephone or changing the number.
3. Press the **Done** Key to activate Call Forward.

To view the number that your calls are being forwarded to:

1. Press the **Check Forward** Key.
2. Press the **Exit** Key to return to the previous screen.  
This action will leave Call Forward active.

To cancel Call Forward:

1. Press the **Check Forward** Key.
2. Press the **Cancel Forward** Key.